

- Ring line right-hand engine side Ring line left-hand engine side

- 1 Ring line right-hand engine
 2 Ring line left-hand engine
 3 Holder
 4 Pressure regulator
 5 Diaphragm damper
 6 Fuel hose
 7 Fuel hose
 8 Fuel hose
 9 Fuel hose for return line
 10 Fuel hose
 11 Fuel hose
 12 Fuel hose

- 12 Fuel hose13 Protective hose14 Protective hose
- 15 Screw
- Corrugated washer
- 17 Cold starting valve

- 18 Gasket
- Thermo-time switch
- 20 21 22 23 24 25 26 27 28 29 30 31
- Sealing ring
 Coolant temperature sensor
 Sealing ring
 Air temperature sensor
 Contour hose

- Contour hose
 Supplementary air valve
 Gasket
 Screw

- Corrugated washer
- Idle speed adjusting screw Compression spring
- Idle speed air distributor
- Sealing ring
- Connection

- 35 Hose clip 36 Contour hose
- Throttle valve switch
- Throttle valve housing Hose clip Injection valve
- 36 37 38 39 40
- 41 42 43 44 45
- Corrugated washer Holder Rubber ring

- Rubber ring
- Fuse
- 46 47 48 Rubber ring Insulating sleeve
- Intake pipe pressure sensor Control unit